

TRIBAL DUMMIES 木人樁

FULL WALL MOUNTED DUMMY PACKING LIST:


PARTS:

- A Upright Rails
- B Wall Rails
- C Cross Rails
- D 3 arms with pins
- E 1 leg
- F 4 Spacer Blocks
- G Leg Pin
- H 8 220mm Bolts
- I 4 150mm Bolts
- J 6 Batten Screws



ASSEMBLY INSTRUCTIONS:

1. Lay the Wall rails (B) on the floor, (countersunk hole facing wall) place the 4 Spacer Blocks (F) on top as shown, place the Upright Rails (A) on top.
2. Insert the 8 Bolts (H) to hold these parts together
3. Hold the frame against the wall in position. Rest the 2 Upright Rails (A) on the floor for added support. Mark the positions of the wall studs onto the Wall Rails and wall.
4. Pre-drill holes in both, then affix to the wall with 4-6 Batten Screws provided. (note for masonry walls, will need to provide own hardware)
5. Place the Cross Rails (C) through the Dummy Body and fasten to the frame at desired height with 4 Bolts (I).

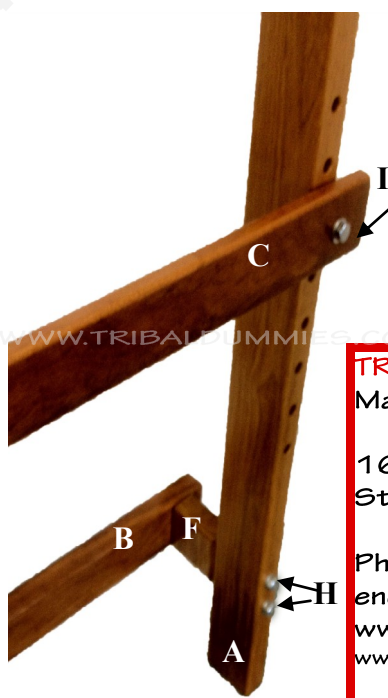

TRIBAL DUMMIES

Made by Lui's Woodworks

16 Wolverhampton Street
Stafford, QLD 4031.

Ph 07 3856 5500

enquiries@tribaldummies.com
www.tribaldummies.com
www.facebook.com/tribaldummies



木人樁
DUMMIES

